


API Bottom Loading Adapter Spare Parts

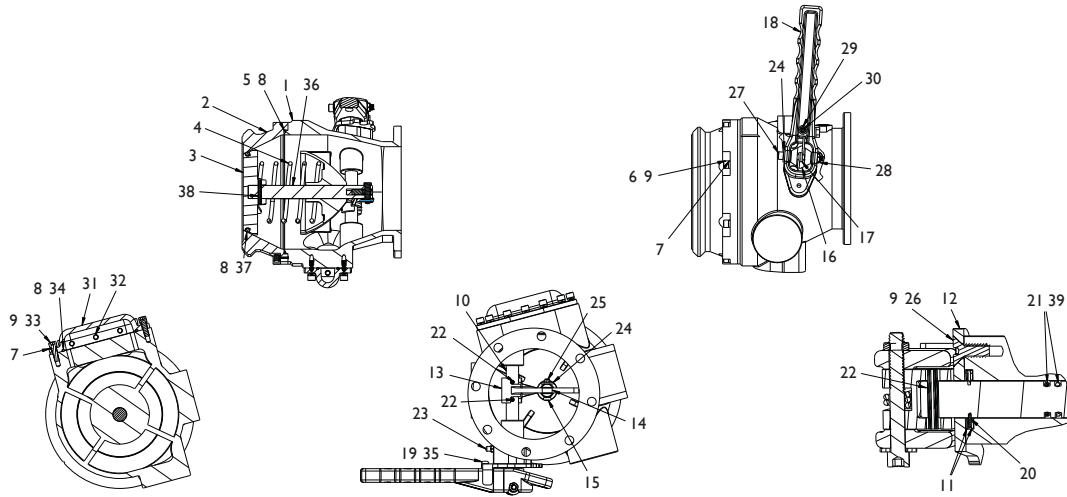

Item	Description	Part Number	880-500 Model
1	Tank adapter with handle for 1" sight glass	880-502-03	-03
	Tank adapter with handle for 3.5" sight glass	880-502-04	-04
2	Adapter, API	880-501-01	-01, -02, -03, -04, -07
3	Poppet head	880-509-01	-01, -02, -03, -04, -07
4	Spring, poppet	880-127-01	-01, -02, -03, -04, -07
5	O-ring	11039-38	-01, -02, -03, -04, -07
6	Cap screw, socket head, 1/4-20 x 1"	11170-15	-01, -02, -03, -04, -07
7	Lock washer, 1/4", high collar	400263003	-01, -02, -03, -04, -07
8	Petroleum jelly	11378-01	-01, -02, -03, -04, -07
9	Anti-seize lubricant	11144-01	-01, -02, -03, -04, -07
10	Shaft, cross	880-510-01	-02, -03, -04, -07
11	Washer, flat, 5/8" ID	880-191-01	-02, -03, -04, -07
12	Latch dual	880-506-01	-02, -03, -04, -07
13	Cam, loading arm	880-215-01	-02, -03, -04, -07
14	Roller, cam	880-190-01	-02, -03, -04, -07
15	Pin, roller cam	880-189-01	-02, -03, -04, -07
16	Hex, permanent handle	880-198-01	-02, -03, -04
17	Spring, handle	880-102-01	-02, -03, -04
18	Handle, dual latching	880-505-01	-02, -03, -04
	Handle, dual latching (Canada)	880-505-03	-07
19	Pin, latch	880-192-01	-02, -03, -04, -07
20	Retaining ring, 5/8"	11001-06	-02, -03, -04, -07
21	O-ring, cross shaft	11039-12	-02, -03, -04, -07
22	Pin, 3/16", spiro	11086-04	-02, -03, -04, -07
23	Fitting, grease	11111-01	-02, -03, -04, -07
24	Washer, flat, 1/4" ID	11136-01	-02, -03, -04, -07
25	Pin, 3/32 x 1/2" cotter	11460-01	-02, -03, -04, -07
26	Screw, flat head 1/4-20 x 5/8"	11067-06	-02, -03, -04, -07
27	Cap screw, socket head 1/4-20 x 2"	11170-16	-02, -03, -04
28	Locknut, 1/4-20	11041-05	-02, -03, -04
29	Washer, flat, .203 ID	11275-07	-02, -03, -04, -07
30	Cap screw, socket head, 10-24 x 5/8"	11030-10	-02, -03, -04, -07
31	Sight glass, 1" bubble	880-511-01	-03
	Sight glass, 3.5" bubble	880-512-01	-04
32	Ball, float indicator, 1/4", orange	880-124-01	-03
33	Cap screw, socket head, 1/4-20 x 3/4"	11170-17	-03, -04
34	O-ring, sight glass, 1" bubble	11039-36	-03
	O-ring, sight glass, 3.5" bubble	11039-37	-04
35	Thread locker	12002-01	-02, -03, -04, -07
36	Stem, cam	880-513-01	-02, -03, -04, -07
37	O-ring, poppet	400333343	-02, -03, -04, -07
38	Spirol pin	11086-06	-02, -03, -04, -07
39	Lubricant, O-ring	11529-01	-02, -03, -04, -07
40	Ball, flow indicator, 3/8", green	880-124-02	-03